Pobrano z mamadecor.pl


INSTALLATION MANUAL


65024T

ecotrackspot | ±45° ADJUSTABLE | 80 CRI | CE RoHS COMPLIANT | NON DIMMABLE

10x5W | **230**V | **50/60**Hz | IP**20** | Aluminium + plastic | Adjustable


Complete with 1200mA driver.



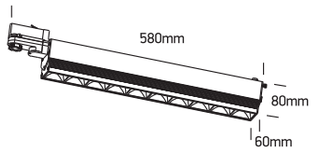


one LIGHT

1

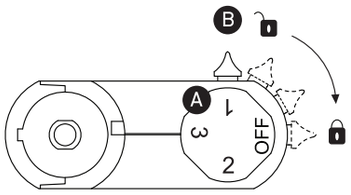


To mount the track adaptor into the track system, first check that the selector knob Ⓐ is at OFF position and the adaptor lock Ⓑ is disengaged.

2

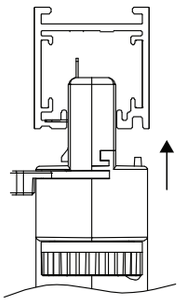


When installing the adaptor into the track, ensure that it is orientated correctly.

3

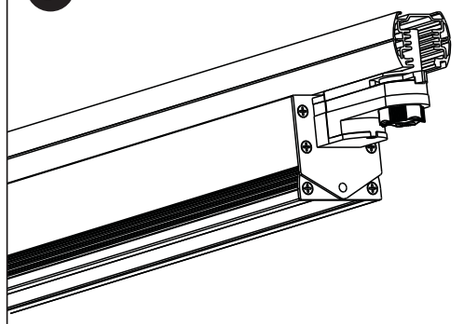


Rotate adaptor lock Ⓑ clockwise 90° to connect the adaptor to the neutral circuit.

4

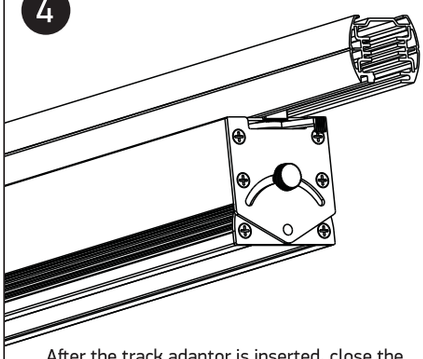


After the track adaptor is inserted, close the security button on the adaptor.

5

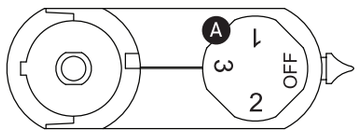


Rotate selector knob Ⓐ to the position of desired circuit.

5a

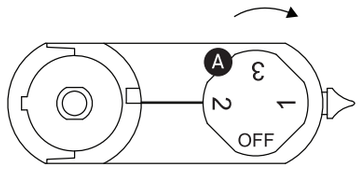


Circuit 1: Rotate the knob Ⓐ 90° clockwise from the starting position OFF, to connect circuit 1.

5b

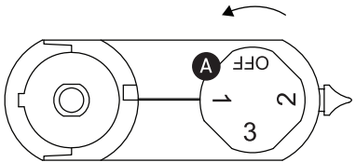


Circuit 2: Rotate the knob Ⓐ 90° anti-clockwise from the starting position OFF, to connect circuit 2.

5c

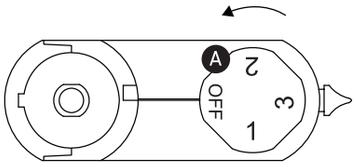

Circuit 3: Rotate the knob Ⓐ 180° clockwise from the starting position OFF, to connect circuit 3.

6

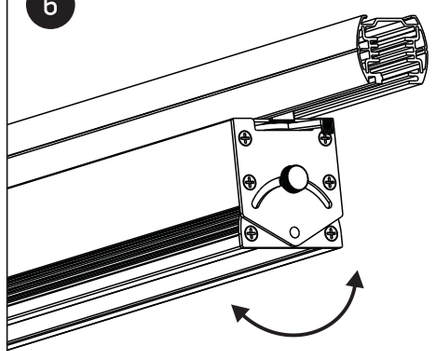

Adjust the light to the direction you need.

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.