Pobrano z mamadecor.pl


INSTALLATION MANUAL

65168T


ecotracklight | ADJUSTABLE | 80 CRI | CE | RoHS COMPLIANT | NOT DIMMABLE


50W | SMD 2835 | 230V | 50/60Hz | IP20 | Aluminium

Complete with 1400mA driver.











one LIGHT

1

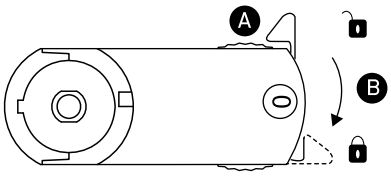


To mount the track adaptor into the track system, first check that the selector knob (A) is at 0 position and the adaptor lock (B) is disengaged.

2

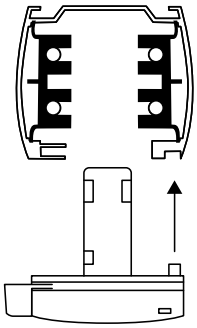


When installing the adaptor into the track, ensure that it is orientated correctly.

3

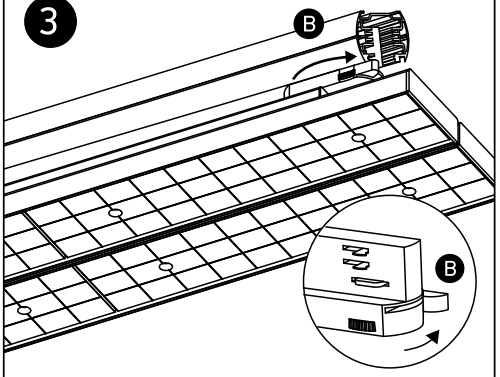


Rotate adaptor lock (B) clockwise 90° to connect the adaptor to the neutral circuit.

4

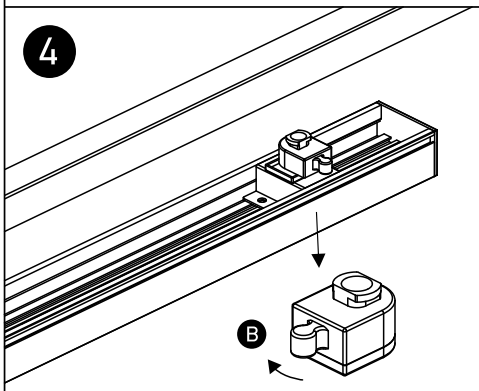


Rotate security button (B) anticlockwise 90° to secure track light to the track.

5

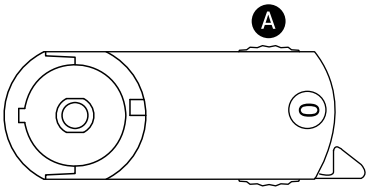


Rotate selector knob (A) to the position of desired circuit.

5a

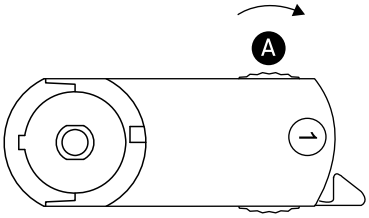


Circuit 1: To connect on circuit 1, from 0 position, rotate the knob (A) fully clockwise to position 1.

5b

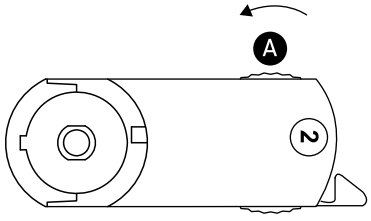


Circuit 2: To connect on circuit 2, from 0 position, rotate the knob (A) fully anti-clockwise to position 2.

5c

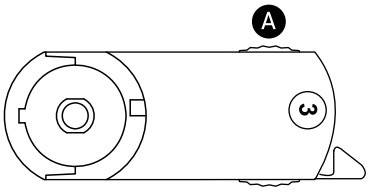

Circuit 3: To connect on circuit 3, from 0 position, rotate the knob (A) to position 3.

6

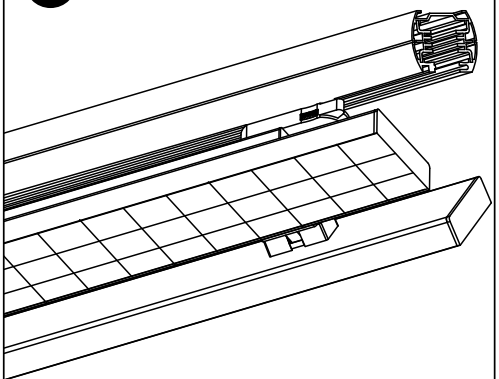

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.