Pobrano z mamadecor.pl


INSTALLATION MANUAL

65614NT


ecotrackspot | ADJUSTABLE | RoHS COMPLIANT | NOT DIMMABLE

42W | **230**V | **50/60**Hz | **IP20** | Aluminium | Adjustable

Complete with 1000mA driver.




90 CRI

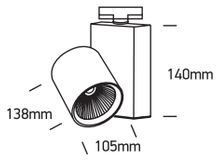


one LIGHT

1

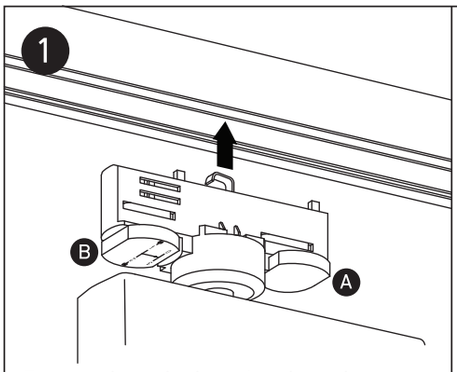


To mount the track adaptor into the track system, check that both tabs Ⓐ & Ⓑ on the adaptor are in the "open" position and insert into the track.

2

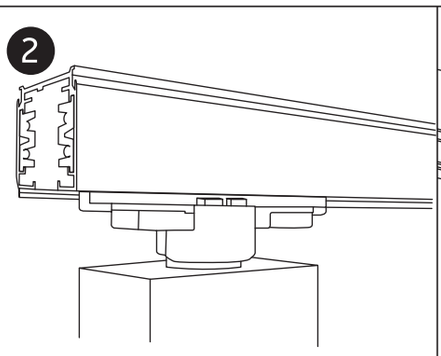


Ensure the track adaptor is inserted with the correct orientation.

3

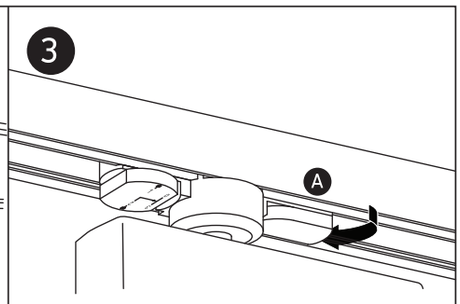


Rotate tab Ⓐ clockwise 90° to connect the adaptor to the neutral circuit.

4

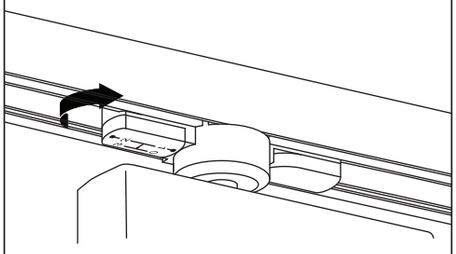


Rotate tab Ⓑ to the desired position circuit.

4a

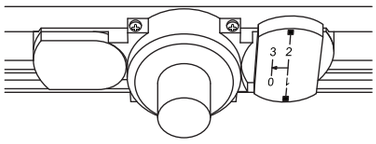


Unconnected: The luminaire is fixed to the track but not connected to any circuit.

4b

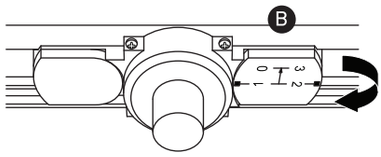


Circuit 1: To connect to circuit 1, from the starting position, rotate the tab Ⓑ clockwise 90°.

4c

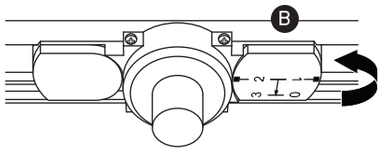


Circuit 2: To connect to circuit 2, from the starting position, rotate the tab Ⓑ anti-clockwise 90°.

4d

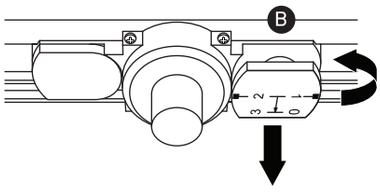

Circuit 3: To connect to circuit 3, from the starting position, pull the tab Ⓑ down and rotate anti-clockwise 90°.

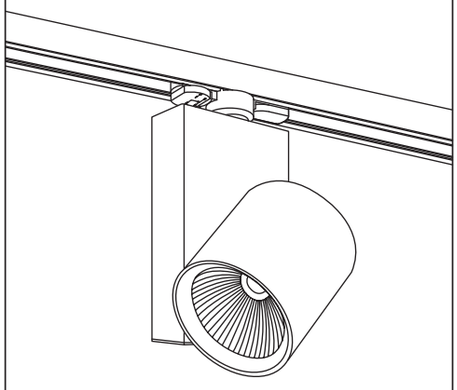

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

www.1-light.eu