
INSTALLATION MANUAL

65652T


ecotrackspot | ADJUSTABLE | CE | RoHS COMPLIANT | NOT DIMMABLE

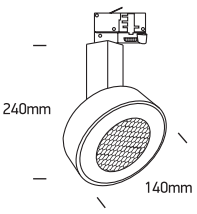

30W | **230**V | **50/60**Hz | IP**20** | Die cast | Adjustable | Complete with driver. | 80 CRI


one LIGHT

1

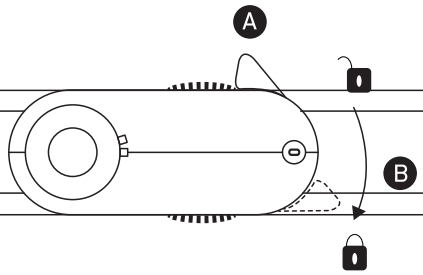


To mount the track adaptor into the track system, first check that the selector knob A is at OFF position and the adaptor lock B is disengaged.

2

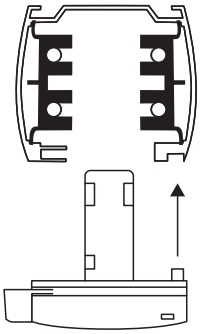


When installing the adaptor into the track, ensure that it is orientated correctly.

3

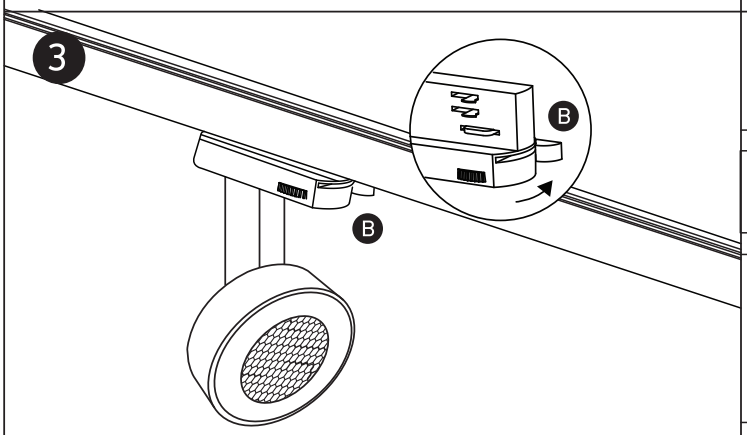


Rotate adaptor lock B clockwise 90° to lock the adaptor into the track system.


4

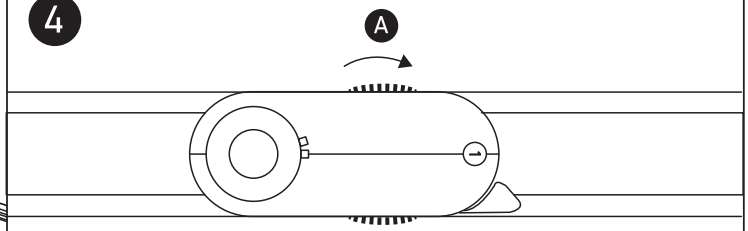

Circuit 1: To connect on circuit 1, from OFF position, rotate the knob A clockwise to position 1.

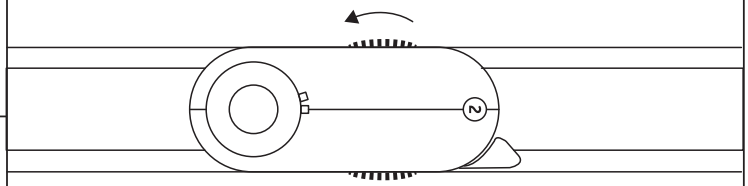


Circuit 2: To connect on circuit 2, from OFF position, rotate the knob A anti-clockwise to position 2.

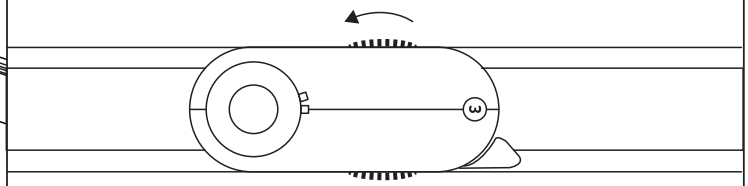

Circuit 3: To connect on circuit 3, from OFF position, rotate the knob A anti-clockwise to position 3.

5

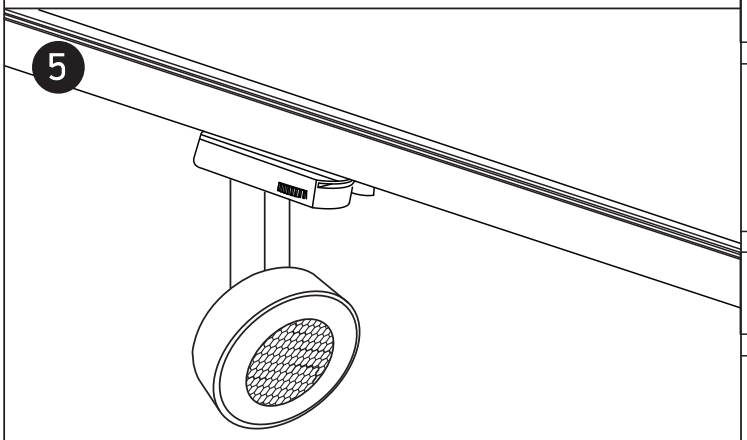

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.