
Pobrano z mamadecor.pl


INSTALLATION MANUAL

65654AT

ecotrackspot | ADJUSTABLE | RoHS COMPLIANT | NOT DIMMABLE


20W | **230**V | **50/60**Hz | **IP20** | Adjustable | Aluminium
Complete with 450mA driver.



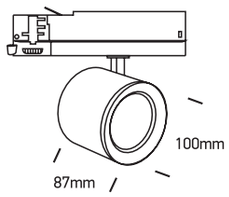


one LIGHT

1




To mount the track adaptor into the track system, first check that the selector knob Ⓐ is at OFF position and the adaptor lock Ⓑ is disengaged.

2

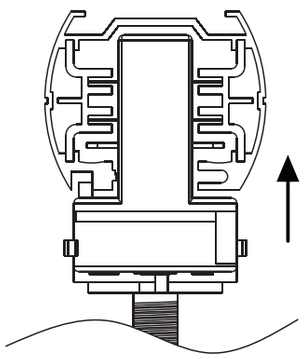


When installing the adaptor into the track, ensure that it is orientated correctly.

3

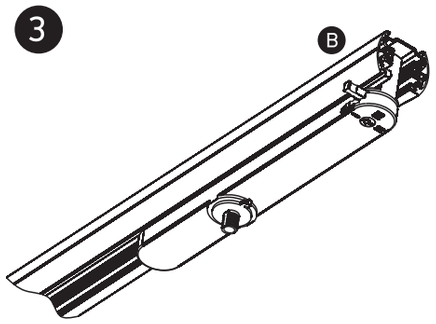


Rotate adaptor lock Ⓑ clockwise 90° to connect the adaptor to the neutral circuit.

4




Rotate selector knob Ⓐ to the position of desired circuit.

4a




Circuit 1: Rotate the knob Ⓐ 90° clockwise from the starting position OFF, to connect circuit 1.

4b




Circuit 2: Rotate the knob Ⓐ 90° anti-clockwise from the starting position OFF, to connect circuit 2.

4c



Circuit 3: Rotate the knob Ⓐ 180° clockwise from the starting position OFF, to connect circuit 3.

5

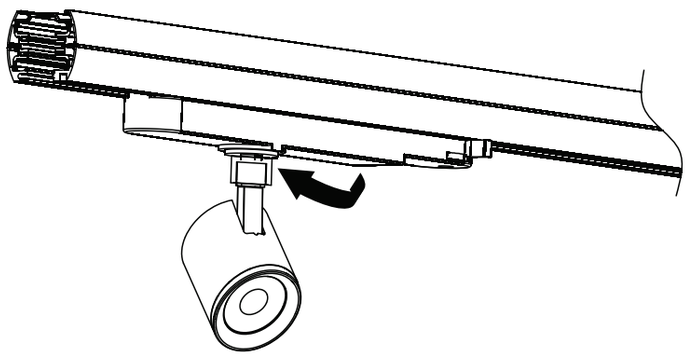

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.

www.1-light.eu