Pobrano z mamadecor.pl


INSTALLATION MANUAL

65654CT

ecotrackspot | ADJUSTABLE | RoHS COMPLIANT | NOT DIMMABLE

40W | **230V** | **50/60Hz** | **IP20** | Adjustable | Aluminium
Complete with 1050mA driver.

90 CRI

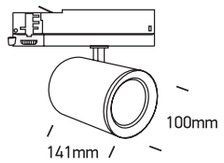


one LIGHT

1




To mount the track adaptor into the track system, first check that the selector knob (A) is at OFF position and the adaptor lock (B) is disengaged.

2

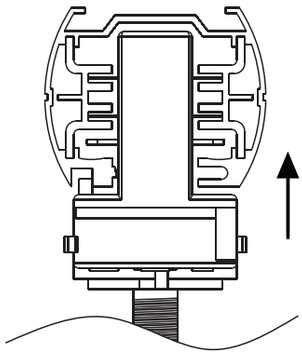

When installing the adaptor into the track, ensure that it is orientated correctly.

3

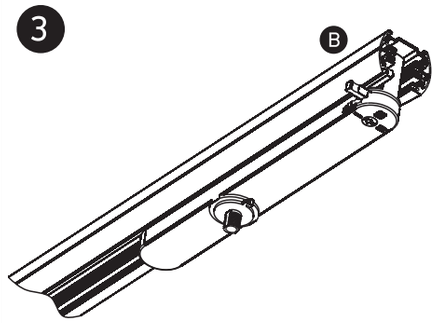

Rotate adaptor lock (B) clockwise 90° to connect the adaptor to the neutral circuit.

4




Rotate selector knob (A) to the position of desired circuit.

4a




Circuit 1: Rotate the knob (A) 90° clockwise from the starting position OFF, to connect circuit 1.

4b




Circuit 2: Rotate the knob (A) 90° anti-clockwise from the starting position OFF, to connect circuit 2.

4c



Circuit 3: Rotate the knob (A) 180° clockwise from the starting position OFF, to connect circuit 3.

5

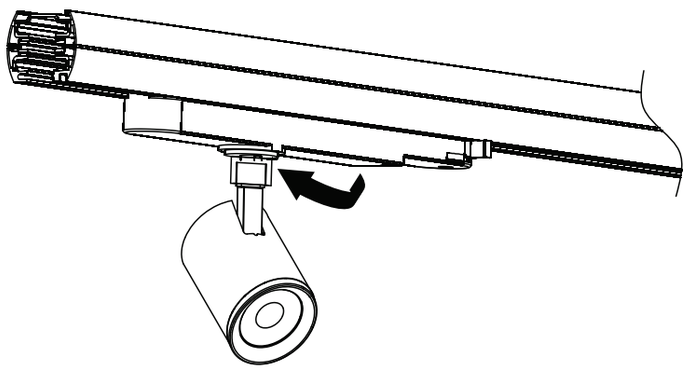

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.