
Pobrano z mamadecor.pl

INSTALLATION MANUAL


65620AT

ecotrackspot | ADJUSTABLE | DARK LIGHT | CE | RoHS COMPLIANT | NOT DIMMABLE

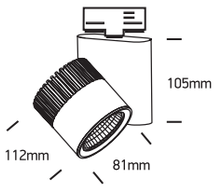


20W | **230V** | **50/60Hz** | **IP20** | Aluminium | Adjustable | 80 CRI | Complete with driver.


one LIGHT

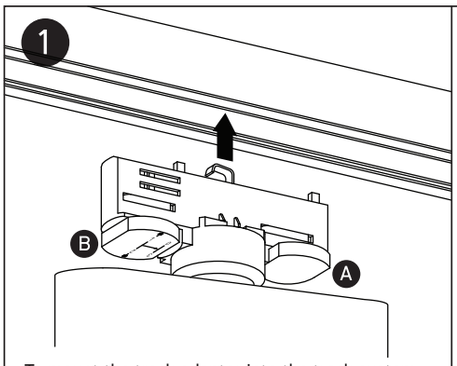


To mount the track adaptor into the track system, check that both tabs Ⓐ & Ⓑ on the adaptor are in the "open" position and insert into the track.

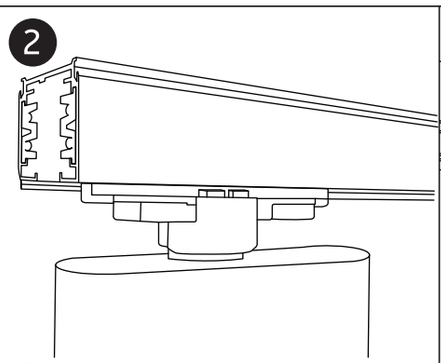


Ensure the track adaptor is inserted with the correct orientation.

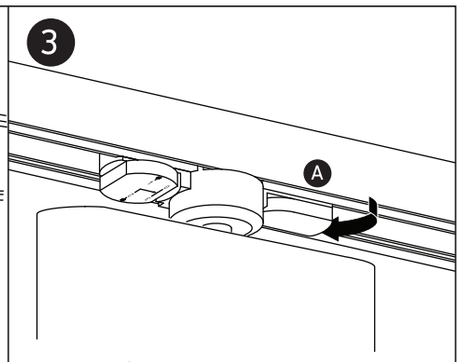


Rotate tab Ⓐ clockwise 90° to connect the adaptor to the neutral circuit.

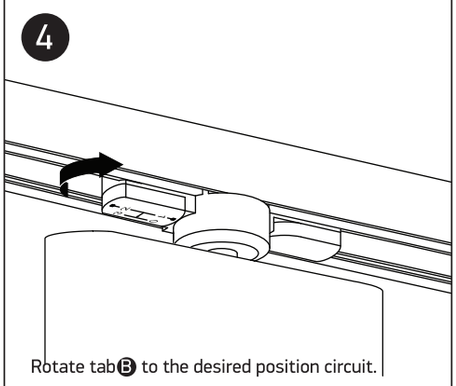


Rotate tab Ⓑ to the desired position circuit.

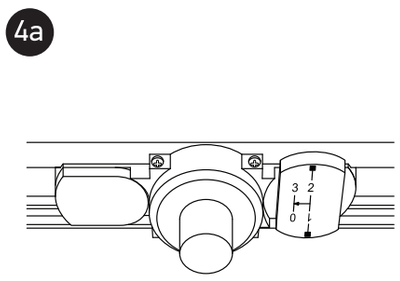


Unconnected: The luminaire is fixed to the track but not connected to any circuit.

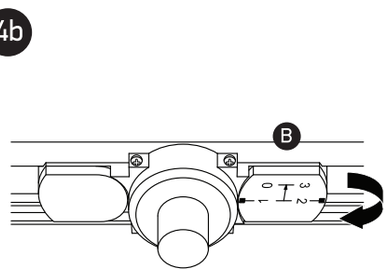


Circuit 1: To connect to circuit 1, from the starting position, rotate the tab Ⓑ clockwise 90°.

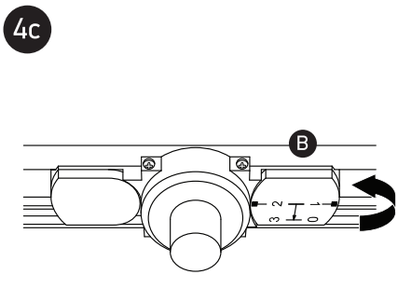

Circuit 2: To connect to circuit 2, from the starting position, rotate the tab Ⓑ anti-clockwise 90°.

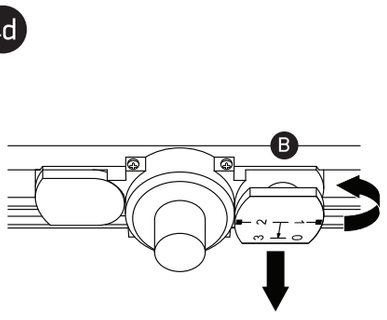

Circuit 3: To connect to circuit 3, from the starting position, pull the tab Ⓑ down and rotate anti-clockwise 90°.

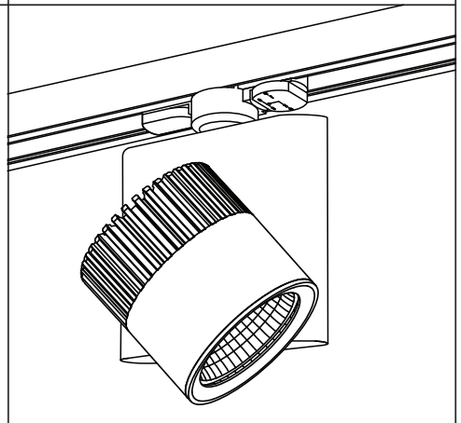

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.