Pobrano z mamadecor.pl


INSTALLATION MANUAL

62018F, 62030F, 62038F, 62046F

ecolight | 80 CRI | CE RoHS COMPLIANT | NOT DIMMABLE


230V | SMD **4014** | **18**W / **30**W / **38**W / **46**W | IP**40** | Aluminium + PC | Complete with driver.

one LIGHT

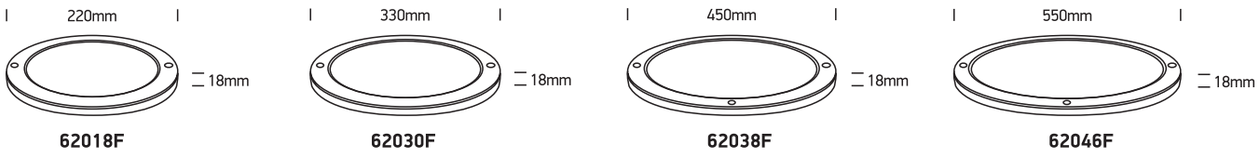


SURFACE MOUNTED

A

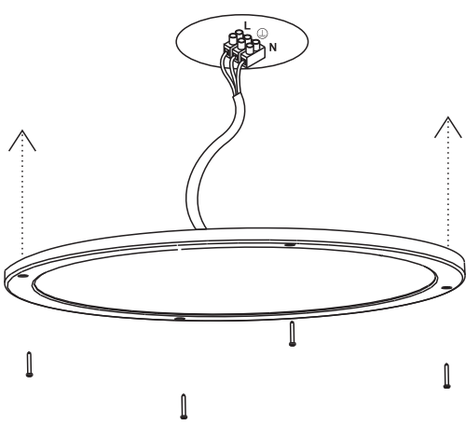

Fix the plafo using the screws provided.


B

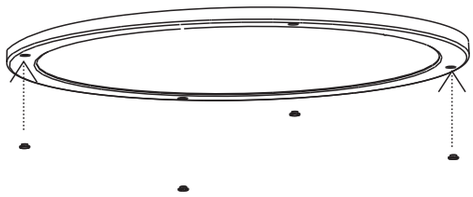

Cover the holes with rubber plugs provided.


INSTALL IN PRE-INSTALLED ORDINARY CEILING BACKBOX (USE THE BRACKET)

A



Fix the bracket onto the box with the screws provided.

B

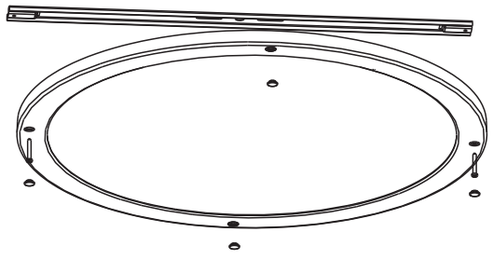

Fix the plafo onto the bracket with screws, and then
Cover the holes with rubber plugs provided.

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.