INSTALLATION MANUAL


68004

ecolight | DIMMABLE | DARK LIGHT | RoHS COMPLIANT | DIMMABLE

350mA | **3**W | IP**54** | Aluminium | Recessed

Requires 350mA driver.
Supplied with box for concrete installation.


90 CRI

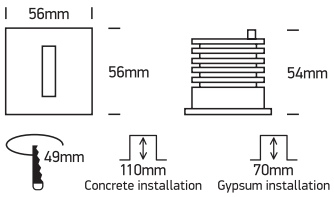

one LIGHT


FOR CONCRETE INSTALLATION

A

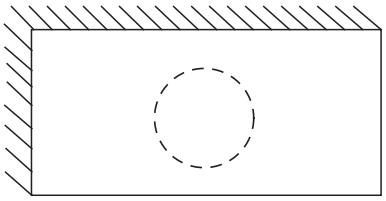


Hole required with diameter 49mm.

B

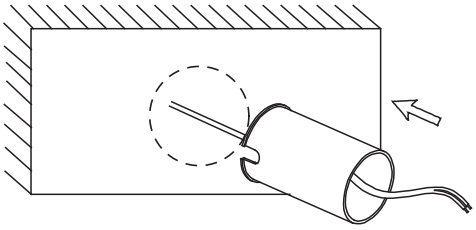


1. Insert cable through wall box
2. Insert wall box into the wall and secure with cement.

C

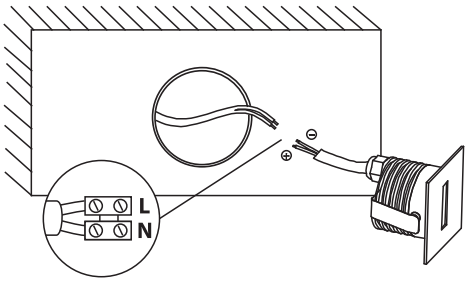

Connect and terminate wires to the terminal block connector.


D

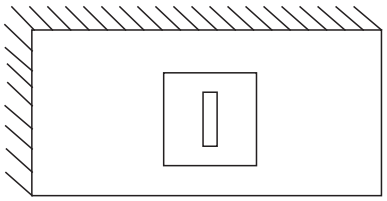

Secure the fitting into the wall box.


FOR GYPSUM INSTALLATION

A

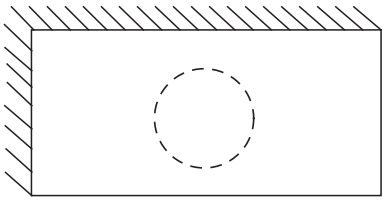


Mark gypsum board and cut hole with diameter 49mm.

B

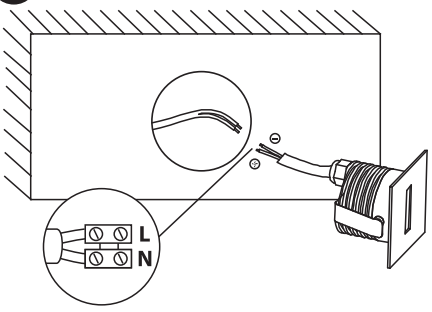

Connect and terminate wires to the terminal block connector.

C

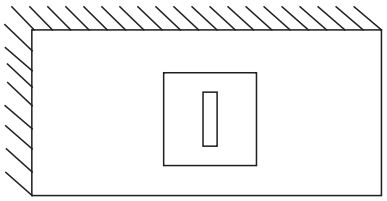

Install provided kit for gypsum board and insert fitting into the board until the clips snap into place.

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.