Moda Bathroom Wall Light Fitting

INSTRUCTION MANUAL

Safety Warnings

- This product is only suitable for connection to a 240V~50Hz supply in accordance with current IEE wiring regulations. It should be installed in accordance with local building regulations and is for domestic use only.
- Before installing your light ýtting always switch off the mains supply and remove the appropriate fuse or switch off the appropriate circuit breaker before commencing installation.
- This is a Class 2 double insulated


Endon Lighting, LS9 0SE

76656-Moda-BW 20180615

Pobrano z mamadecor.pl

Assembly/ User Instructions Continued

1. Decide on the position of the light ýtting / or remove existing light ýtting. Take a note of the position of the electrical connections. Ensure there is a solid mounting surface.
2. Using the wall back as a template, mark and drill the ýxing holes. Take care not to damage any concealed wiring or pipes. The distance between the mounting holes is 580mm.
3. Remove the end caps (A) and keep safe for reýtting later.
4. Remove the waterproof cover and set aside for reýtting later (B).
5. Connect the house wiring according to the Terminal Block diagram below. Pass the house wiring cable through the long grommet and connect to terminals. Ensure no strands of wire escape the Terminal Block (C).
6. Reýt waterproof cover set aside earlier (D).
7. Fix the light in position using the supplied screws and wall plugs. (E)
8. Reýt end caps set aside earlier (F).
9. Turn on the power and test. Switch on using rocker switch (G).

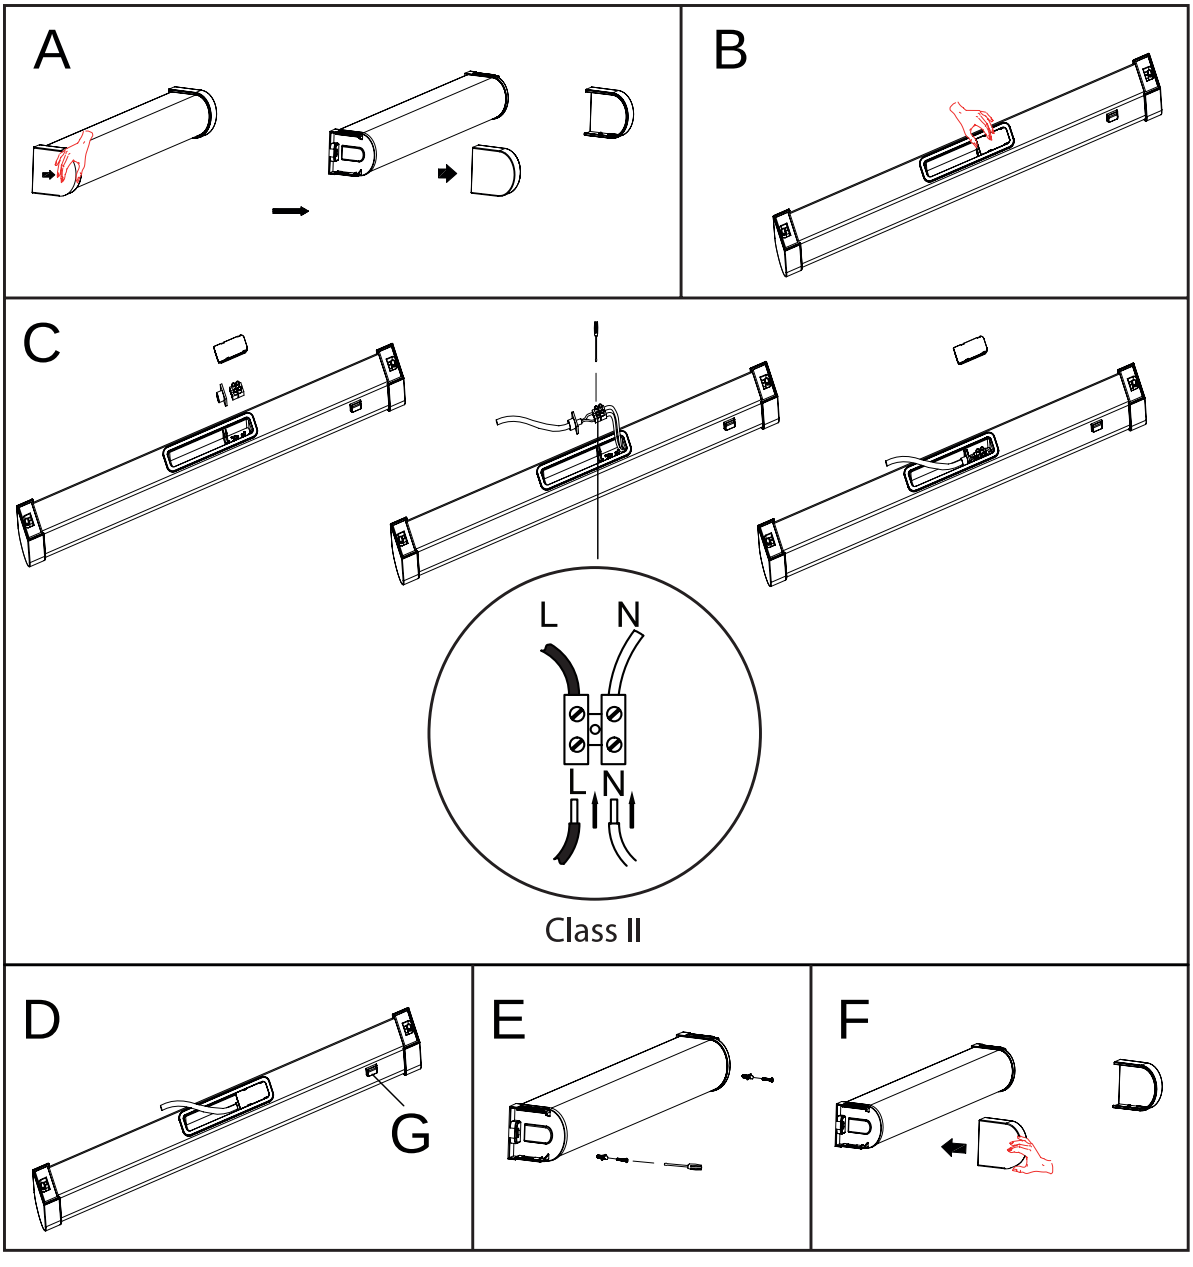

Endon Lighting, LS9 0SE

76656-Moda-BW 20180615